




## ***INSTALLATION MANUAL FOR NATURAL ESTER OIL VALVE***



Follow the instructions in this manual for correct installation of the device.


1. Unscrew the fitting as shown below.  
Wrap the teflon on the thread of the tube attached to the transformer cover.  
Screw the previously unscrewed fitting onto the tube of the transformer cover.

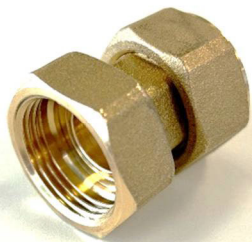

2. Screw the device to the fitting previously mounted on the transformer tube.  
Be careful to position the gasket provided for sealing between the two fittings



Gasket

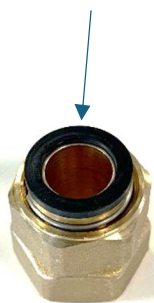

3. Wrap the teflon on the lower connector of the device.  
Screw the dehydrating Breather on the connector.



Check that all the fitted fittings have been tightened properly

